


TIME SETTING


STANDARD

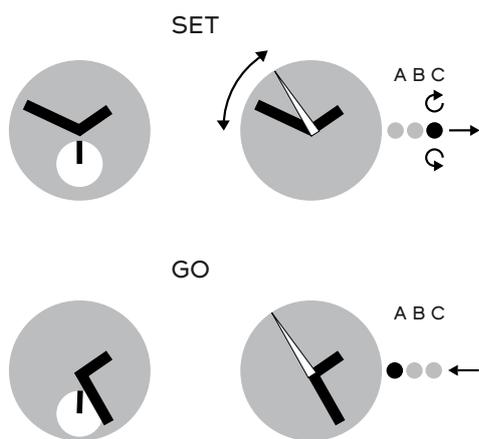

A: Normal position of the crown
 C: Position for setting the time

To set the time, pull the crown out to position C and turn clockwise or anticlockwise. After resetting has been completed, press the crown back to position A.


TOUCH / FUN

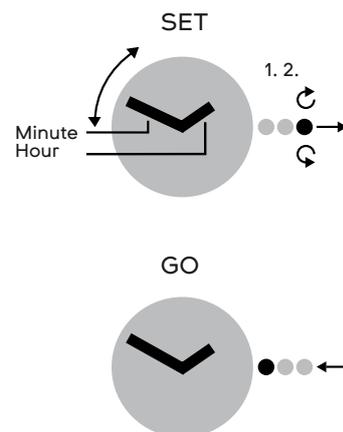

To set the time, pull the crown to position 2. Turn slowly to correct minutes. Turn quickly to correct hours. After resetting has been completed, push the crown back.

DATE OR DAY SETTING


STANDARD

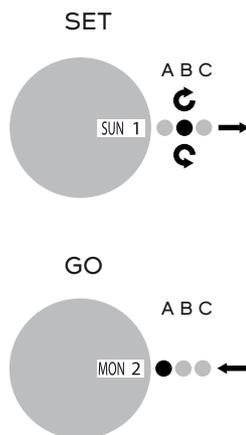


To set the date, pull the crown to position B, and turn anticlockwise. To set the day, turn the crown in a clockwise direction. After resetting has been completed, press the crown back to position A.

READJUSTMENT


TOUCH / FUN

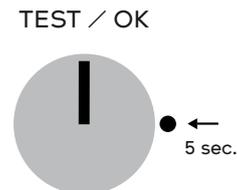

ADJUST HAND/+HOUR

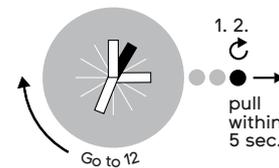

ADJUST HAND/+MINUTES

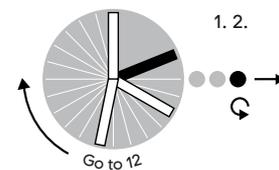

GO



Push crown for 5 seconds. If both hands go to 12 o'clock, test is ok. Push crown again and hands go back to time.

If hands are not exactly at 12 o'clock, pull crown to position 2. Turn clockwise to readjust hour hand. Turn counter clockwise to readjust minute hand. Push crown back and hands turn back to show time.

LOOMI FUNCTION: DISPLAY

TOUCH LOOMI

TOUCH YOUR SWATCH




LOOMI ON



LOOMI


LIGHT FUNCTION

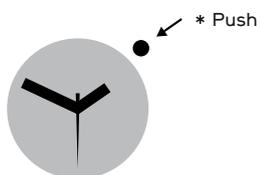


POP



POP-IN

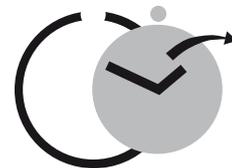

POP-OUT

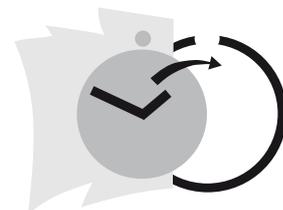


POP ON CLOTHES



Note: Wear your Swatch simply with its band or try „popping“ it directly onto your clothes.


TOUCH ALARM

SHOW ALARM TIME

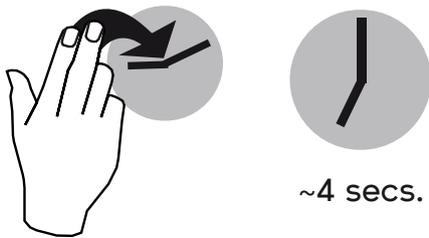

Touch your Swatch.
Hands move to show alarm time for approx. 4 seconds.

STOP ALARM

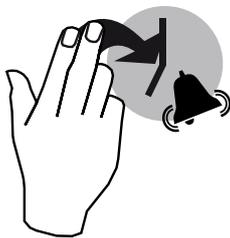

Touch your Swatch to stop alarm.


ALARM ON/OFF




...CHANGE ON/OFF



SHOW LAST ALARM

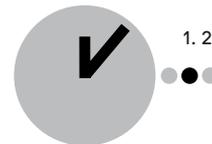

...SET NEW ALARM

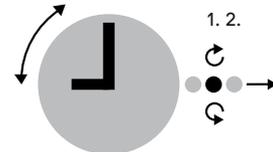

GO



Switch alarm on/off and set alarm time
Press crown and hands go to actual mode
on or off.


Press crown again to change mode.

Pull crown to position 1 and the hands go
to the last alarm time.

To set a new alarm time, turn crown (turn
slowly = minutes, turn quickly = hours).

Then push crown back and hands turn
back to time and alarm mode will be "on".

ALARM DEMO

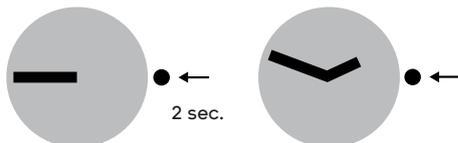

Press crown for 2 seconds to start alarm demo.
To stop, press crown again.




IMPORTANT: When the hands do not show correctly ON-OFF (alarm mode), the Touch Alarm must be adjusted (e.g. after battery change or a hard knock).

TOUCH GAME



Touch your Swatch.

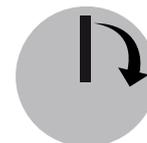

Hands come together at 12 o'clock and start to rotate at least on full turn.




IMPORTANT: If hands are not exactly at 12 o'clock, they have to be readjusted.



~4 secs.

Hands stop by accident and show the result of your game for some seconds...
...then, hands turn back to time.

SCUBA FUNCTION: ELAPSED TIME

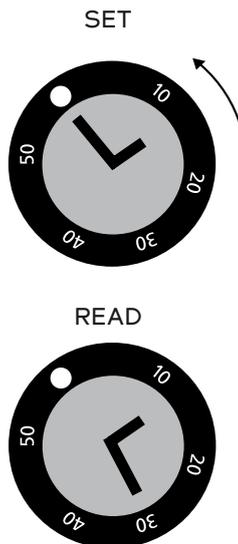**Using the adjustment ring**

For setting the start time and duration of an activity, line up the marker on the adjustment ring with the minute hand. Timing starts at the time indicated by the marker. The elapsed time is indicated by the minute hand pointing the number on the adjustment ring.

**WARNING NOTE**

IMPORTANT: After being submerged in salt water, the Scuba 200 Chrono should always be rinsed with fresh water.

CAUTION: The Irony Scuba 200 Chrono is not a professional diving watch.